

INSTALLATION

G U I D E

REVIVAL™
BATH AND SHOWER
FAUCET TRIM

THE BOLD LOOK
OF **KOHLER**®

IMPORTANT INSTRUCTIONS

READ AND SAVE FOR THE CONSUMER

 **WARNING: Risk of scalding or other severe injury.**

- Before completing installation, the installer must set the maximum water temperature setting of this valve to minimize the risks associated with scalding hazards according to ASTM F 444.
- Do not install a shut-off device on either outlet of this valve. The installation of any such device may create a cross-flow condition at the valve and affect the water temperature.
- Factors that change the temperature of the water supplied to the valve, such as seasonal water temperature changes, and water heater replacement or servicing, will change the maximum water temperature supplied by the valve and may create a scalding hazard.

The installer is responsible for installing the valve and adjusting the maximum water temperature of this valve according to instructions.

This valve meets or exceeds ANSI A112.18.1M (all valves) and ASSE 1016 (pressure-balanced valves only).

If you do not understand any of the installation or temperature adjustment instructions in this document, in the United States please contact our Customer Service Department at **1-800-4-KOHLER**. Outside the U.S. please contact your distributor.

 
IMPORTANT: Please fill in the blanks below and on the valve label. Then insert these instructions into the plastic bag included with the valve package, and attach the plastic bag to the valve handle for the owner's reference.

**This device has been preset by _____
of _____ to ensure a safe maximum
temperature. Any change in the setting may raise the
discharge temperature above the limit considered
safe, and lead to scalds. Date: _____**


PRESSURE-BALANCED VALVES ONLY

- Pressure-balanced valves may not provide protection against scalding if there is a failure of other temperature-limiting devices elsewhere in the plumbing system.
- The pressure-balanced valve **will not** compensate for changes in the water supply temperature; adjust the maximum water temperature setting of this pressure-balanced valve when such changes occur.

RECOMMENDED TOOLS AND MATERIALS



Assorted
Screwdrivers

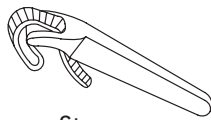

Strap
Wrench



Plumbers
Putty



Thread
Sealant
Tape

BEFORE YOU BEGIN



WARNING: Risk of damage to the K-306-KS valve assembly.

When using the K-306-KS HiFlow Valve in a fiberglass or acrylic installation, use the Thin Wall Installation Kit (88526).

- Observe all local plumbing codes.
- Finished wall or bath/shower unit must be installed prior to installing this trim.
- We recommend that you determine if the maximum water temperature is acceptable prior to installing this trim. If temperature adjustment is needed, refer to the “Adjustments” section.
- The valve shuts off by water pressure. Do not force the handle in any direction. To turn the valve off, gently turn it to the “Off” position.

IF THE VALVE AND FINISHED WALL ARE NOT INSTALLED, INSTALL AT THIS TIME. BE SURE TO FOLLOW ALL INSTRUCTIONS PACKED WITH THE VALVE.

1. INSTALL SPOUT


Remove the temporary nipple from the bath elbow.

Apply thread sealant, and install a 1/2" NPT nipple to the bath elbow to extend 7/16" beyond the finished wall.

Apply plumbers putty or other sealant to the inlet end of the spout according to the putty manufacturer's instructions.

Apply thread sealant to the nipple, and install the spout to the nipple. Carefully tighten with a clean strap wrench.

Remove any excess putty.

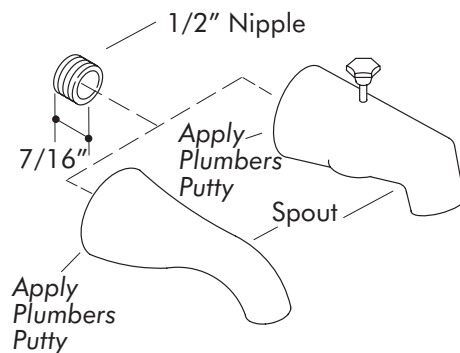

2. INSTALL SHOWER ARM AND SHOWERHEAD



CAUTION: Risk of product damage. To avoid plugging the showerhead spray outlets, use thread sealant tape on shower arm threads. Do not use thread sealant (pipe dope).

FOR STANDARD SHOWER ARM:


Remove the temporary nipple from the shower elbow.

Apply plumbers putty or other sealant to the back of the escutcheon according to the putty manufacturer's instructions. Slide the escutcheon over the shower arm.


Apply thread sealant tape to the shower arm, and install the shower arm to the shower elbow. Carefully tighten with a clean strap wrench.

Press the escutcheon against the finished wall, and secure to the shower arm by tightening the setscrew.

Remove any excess putty.

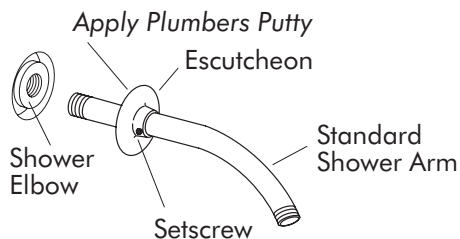

FOR REVIVAL SHOWER ARM:


 **CAUTION: Risk of product damage.** To avoid plugging the showerhead spray outlets, use thread sealant tape on shower arm threads. Do not use thread sealant (pipe dope).

Remove the temporary nipple from the shower elbow.

Apply thread sealant, and install a 1/2" NPT nipple to the shower elbow to extend 1/2" beyond the finished wall.

Apply plumber putty or other sealant to the inlet end of the shower arm according to the putty manufacturer's instructions. Apply thread sealant tape to the nipple, and install the shower arm onto the nipple. Carefully tighten with a clean strap wrench.


Remove any excess putty.

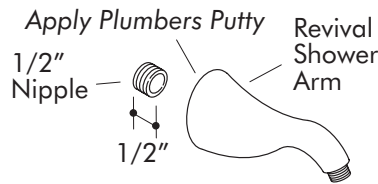

INSTALL SHOWERHEAD

With the showerhead off, flush out the system.

Apply thread sealant tape to the shower arm, and install the showerhead to the shower arm.

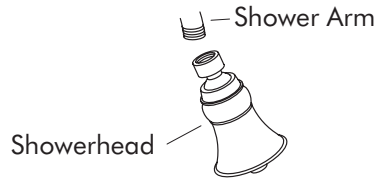

3. ADJUSTMENTS

MAXIMUM WATER TEMPERATURE ADJUSTMENT


NOTE: Do not remove the O-ring and collar at this time. Removing the O-ring and collar will change the factory setting for the maximum water temperature.

For minor water temperature changes, adjust the setscrew.

To check for significant water temperature changes, turn the valve clockwise to the full open position and let the hot water run for several minutes. Position a thermometer in the water stream. The water temperature should never be set above 120° F.

For major water temperature changes, remove the O-ring and collar from the valve stem. Slowly rotate the valve stem until the water temperature is as desired. Reinstall the collar on the valve stem so the setscrew is against the side of the tab. Reinstall the O-ring, and rotate the valve stem counterclockwise to shut the water off. Recheck water temperature to ensure desired water temperature.

NOTE: After installation, complete the required information on the valve label.

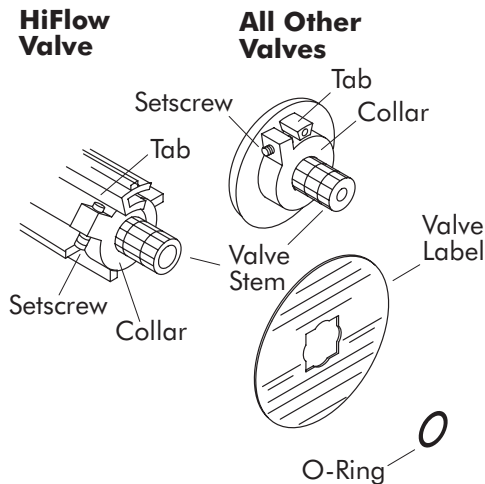


4. INSTALL FACE PLATE AND HANDLE

FOR A VALVE WITH DIVERTER:

Remove and discard the plaster guard and/or dome, if installed.

Position the actuator over the diverter stem, and tighten the setscrew. Slide the guide over the actuator, and thread onto the diverter stem.

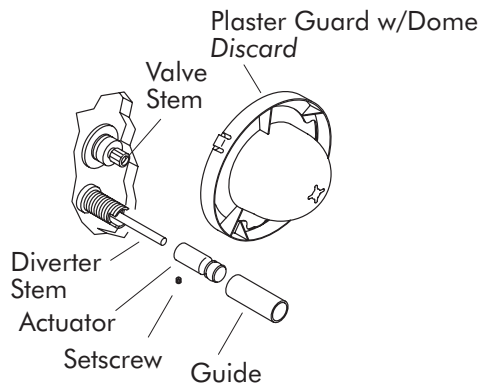

WARNING: Risk of damage to the K-306-KS valve assembly. When using the K-306-KS HiFlow Valve in a fiberglass or acrylic installation, use the Thin Wall Installation Kit (88526).


FOR ALL MODELS:

Remove and discard the plaster guard and/or dome, if installed.

Fit the face plate over the valve, and secure with two screws.

Rotate the valve stem fully counterclockwise.

Slide the sleeve over the valve stem so the slot is down and facing outward.

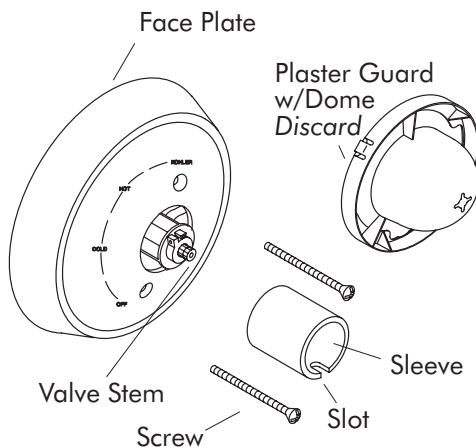


SCROLL HANDLE

Install the handle to the base, and secure with the screw. Align the handle assembly, and press it onto the valve stem. Secure the handle in place by tightening the setscrew.

TRADITIONAL HANDLE

Assemble the handle and bonnet. Install the washer and O-ring onto the base. Fit the handle assembly to the base, and secure with the screw. Align the handle and base assembly, and press it onto the valve stem. Secure the handle in place by tightening the setscrew.

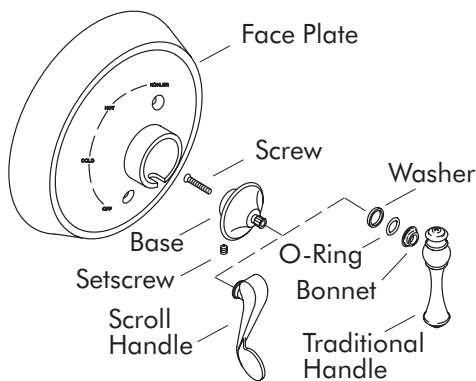

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance in the USA, call our Customer Service Department for direct help. You may also contact us at our web site listed below.

1-800-4-KOHLER

THE BOLD LOOK
OF **KOHLER**[®]
www.kohlerco.com